

ISIMET

Model RMS-5 & RMS-6

Remote Monitoring Station For Fluid Level Monitoring

Installation Instructions

ISIMET

**103 C.J. Wise Parkway
Naples, TX 75568
(903) 897-0737
(903) 897-0740 fax**

Copyright © 2004 **ISIMET**, LLC.
All rights reserved.



The Remote Monitoring Station features two (2) time delay “ON” circuits that are independently field settable from 0 to 5 minutes. The unit is intended for use as an overflow or under level monitoring station for sump pump type system.

RMS-5 is provided with N/O Float Switch - RMS-6 is provided with N/C Float Switch.

Available Companion Components:

- H – Horn / Siren 24-vac
- B – Red Flasher Beacon 24-vac
- Bx – Beacon provided less hardware & SS Panel.
- Hx – Horn shutdown cycle permits horn to be turned OFF during operation.
- F – Stainless Steel Panel (Flush Mount Installations)
- P – Panic Button W/ by-pass circuit to operate alarm W/O flow present.
- K – Key Switch permits system shut-down without remove of the panel.
- S – Strobe Light - Red (10 Joule) 24-vac
- Sx – Strobe provided less hardware & SS Panel.
- A – Audible Sounder (90 dB) 24-vac

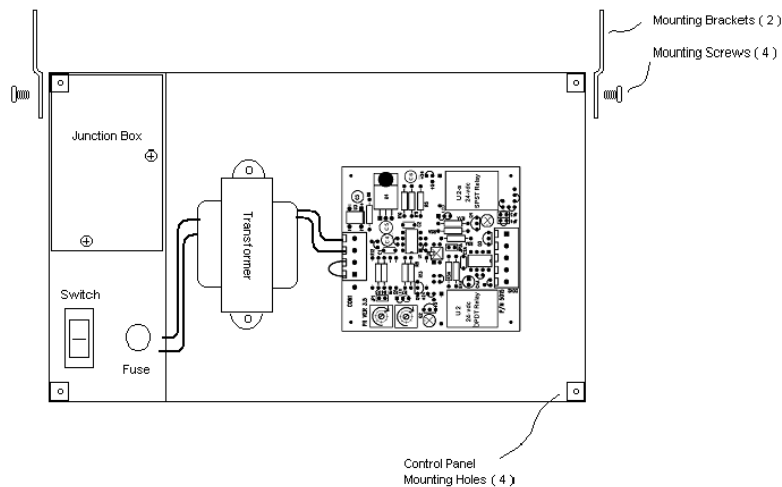


Figure 1

Mounting the Wall Box:

Using the provided mounting brackets and screws, secure the unit to a structural member. The unit should be mounted in a location convenient for maintenance so that adjustments to the delay setting are convenient. After mounting and installation of interconnect cabling, we recommend that the cover be placed over the box opening so as to prevent debris from potentially damaging the unit.

Enclosure Dimensions: 6.0 X 9.875 X 3.75

Service Requirements:		Output Circuit Voltage Rating:	
120/60 vac; 5 amp fuse	Min. 14 AWG	Transformer 24 VAC	2 Amps

Installing the Electrical Conduit

Knockout holes for connecting the electrical conduits are located at the top left and right of the Wall Box.

- Connect rigid conduit for the required 120-vac electrical service.
- Connect conduit for the operating power to the upper left top of the enclosure at the junction box.
- Connect conduit for the 24-vac operating power for the output to the upper right top of the enclosure.

Wiring the Unit

Important!

Verify that the electrical supply is disconnected prior to connecting wiring to the Utility Controller.

To wire the Station:

1. Remove the junction box cover.
2. Make final connections to the 120-vac electrical service to wiring within the junction box. Verify that line wiring (Black), neutral (White), and ground wire (Green) are correctly connected.
3. Minimum recommended wire size is 14 AWG.
4. Replace the junction box cover before activating or testing the unit.

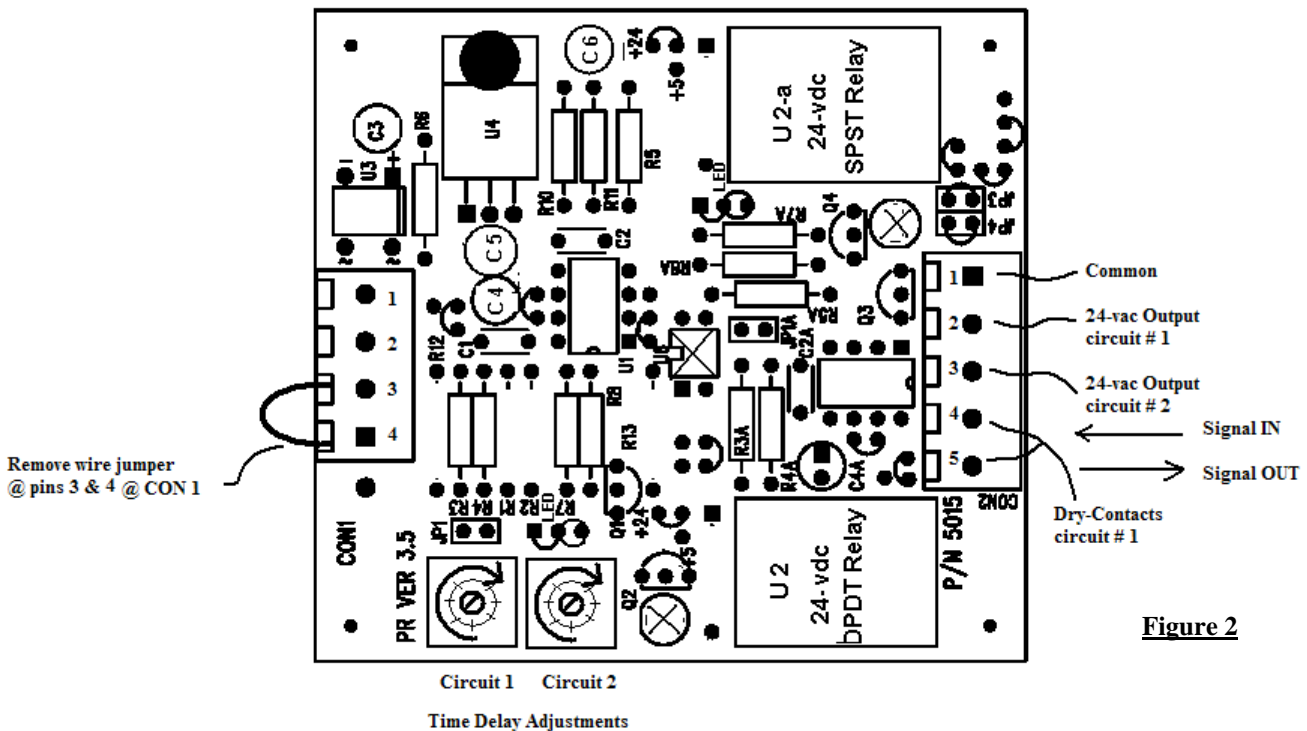


Figure 2

Wiring the Input Signal from the Float Switch Control: Refer to Figure 2

Providing field wiring (two (2) - 2 conductor -18 AWG max cables.), Remove jumper as shown in diagram. If the unit is operated by a float switch, connect the two leads from that switch to pins 3 & 4.

Wiring the Output Control Signals: Refer to Figure 2

Make wiring connections to 24-vac monitoring devices at posts 1-2-3 @ CON 2. If an audible sounder such as a siren is used then it is recommended that this device be connected to posts 1 & 2 (Circuit 1) and that the adjustment for Delay "ON" be set for a period exceeding that of Circuit 2. Output for a visual indicator (Beacon or Strobe) should be made at posts 1 & 3 on CON 2.

Post 4 & 5 @ CON 2 are dry-contact connections for integration with an independent integrated monitoring system. Contacts are controlled at Circuit 1.

If the Unit is provided with a Float Switch:

The float switch will serve as the closed contacts to activate the unit. If current is generated by detected rise (N/O) or fall (N/C) but is terminated before the delay "ON" cycle elapses, then the monitoring devices connected to the output terminals will not respond.

Extend if necessary and connect the two leads from the switch to posts 3 & 4 @ CON 4. See Figure 2. Do not make extension joints below assumed flood level.


The float switch should be securely affixed to some permanent component to insure that the desired level setting is maintained during operation. Securing means is field provided.

Determine the fluid level for operation and needed travel of the bulb. Secure the float as illustrated in figure 3.

A normally closed float will activate the monitoring station upon loss of fluid level. Normally open will activate upon rise in fluid level.



Figure 3

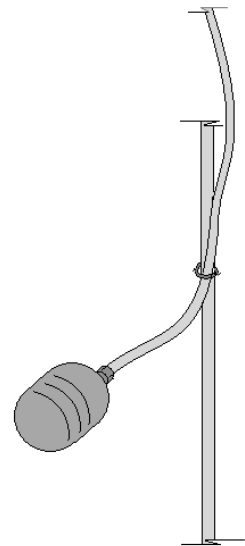

Installing the Wall Panel

- Remove any protective cover previously placed over the face of the Wall Box.
- Verify that Unit is wired with Junction box cover in place.
- Turn Power ON. (Verify that switch illuminates.)
- Simulate flow or input to verify that the two circuits operate.
- Adjust the circuits for the desired delay "ON" time. Factory setting is 5 sec.
- Turn the dials clockwise to increase time delay "ON".
Note: Removal of the jumper from jumper posts 1 or 2 will expand the delay "ON" settings.
- Affix panel to box using (4) 8-32 stainless screws provided with panel.

CAUTION! Do not install the panel until all wall finishes are complete.

Operation of the Unit:

The Remote Monitoring Station will operate automatically each time input is received across posts 3 & 4 on CON 4. If the input signal is terminated prior to lapse of the delay "ON" period then no output signal will be emitted. Each cycle of an input signal will restart the time delay "ON" cycle.

Optional Wall Panel:

F – A Stainless Steel Wall Panel is provided suitable for flush mounting applications.

Optional Features and Panel Mounting Components:

Wiring and Connection Instructions are provided when these features are included with the unit.

Hx – The Horn shut down circuit permit an audible sounder to be turned OFF during operation of the unit.

When provide with “P” option, this button also turns system “OFF” when activated by the Panic Button.

P – a Panic Button will activate the unit and bypassing the circuit 1 the time delay cycle without an input signal.

K – A key switch permits the unit to be turned OFF without requirement of removal of the wall panel

Warranty:

***ISIMET* will repair or replace any defective parts or workmanship of this product for a period of one year from date of installation. Damage caused by incorrect installation or improper usage is not warranted. Failure to follow recommended installation, operation, and/or maintenance procedures listed in this manual may void product warranty. Recovery rights shall be limited to the total sum of the amounts paid for the product by the purchaser.**

Limits of Liability:

***ISIMET's* liability shall be limited to costs of repair or replacement parts. This unit is not intended for usage other than those expressly described in this manual. *ISIMET* shall not be liable for damage or injury caused by the improper use of the product.**

***ISIMET* shall not warrant against or assume liability for failure of operation or lack of notification to secondary integrated monitoring systems. The system should be thoroughly tested and adjustments made at time of initial operation. Periodic testing should be conducted by the user to assure that all components function and operate according to specifications.**

Care should be taken in the installation of this product. *ISIMET* shall not be liable for damage or injury caused from the improper installation of the product.

Warranty is Subject to Compliance with Specific Installation Requirements.

This document is copyrighted. This document may not, in whole or part, be copied, duplicated, reproduced, translated, electronically stored, or reduced to machine readable form without prior written consent from ***ISIMET, LLC***.

Although the material contained herein has been carefully reviewed, ***ISIMET, LLC*** does not warrant it to be free of errors or omissions. ***ISIMET*** reserves the right to make corrections, updates, revisions, or changes to the information contained herein.

ISIMET is a trademark of ***ISIMET, LLC***

Printed in the United States of America