


ISIMET Utc Electric OFF by Panic Instructions

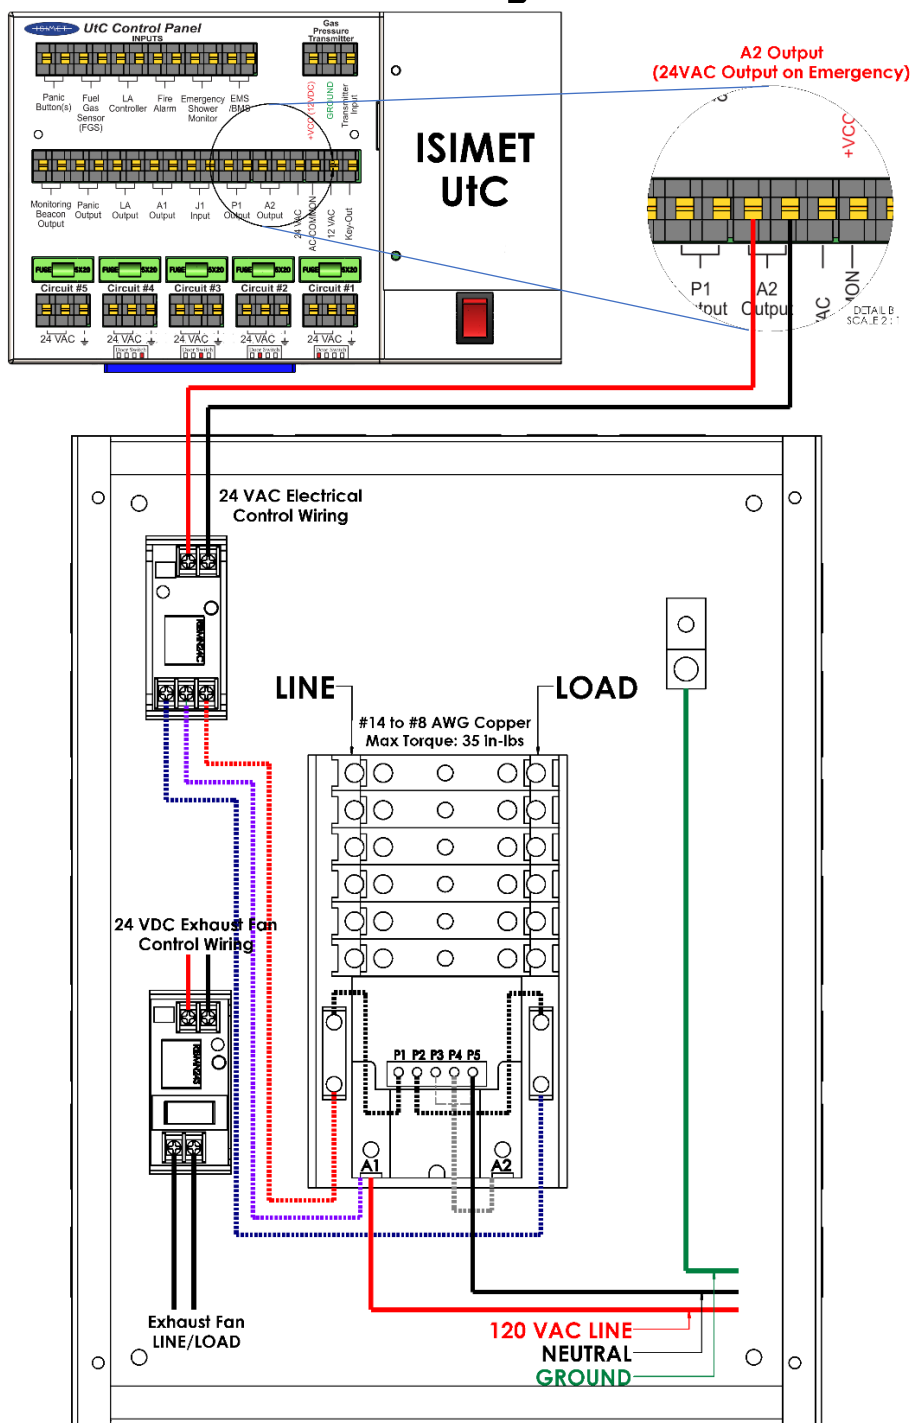

ISIMET E-Series

ISIMET's Utility Controller will ship from the factory with the default configuration set for this installation; however, to verify the configuration, please check the following:

Position 5 should be set to Option 3. This will change the A1 and A2 Outputs to send an inverted signal so the electric will only turn off for an emergency.